
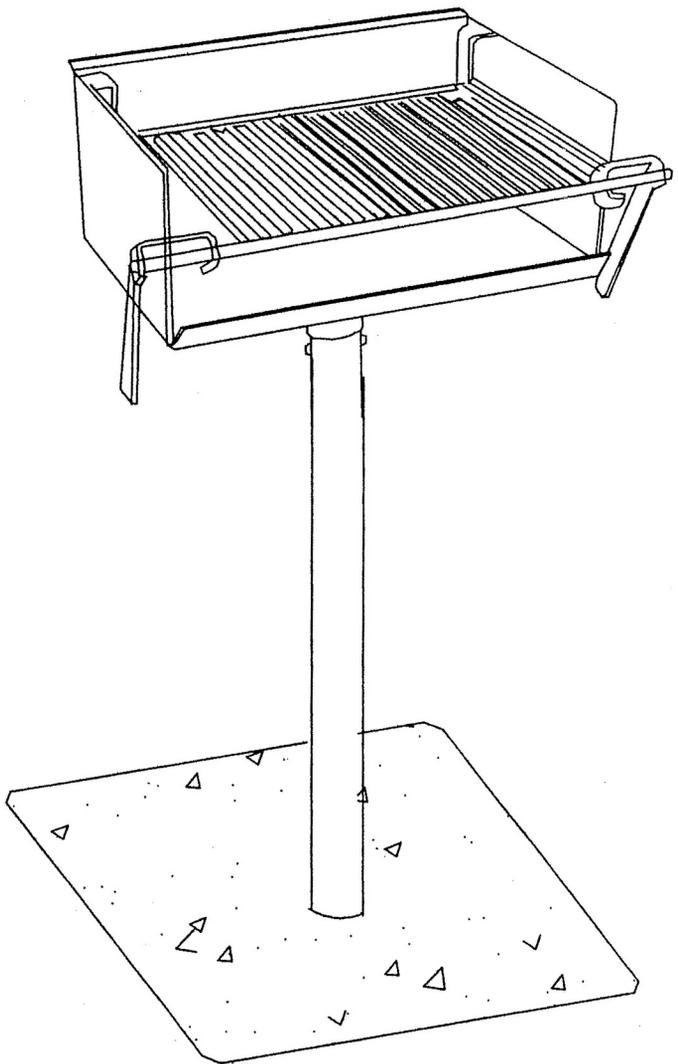


1. SLIDE GRILL OVER THE SUPPORT POST AND BOLT TO SECURE.
2. SECURE BASE PLATE TO SOLID FOUNDATION.
3. HAMMER THE THREAD END OF BOLT FOR ADDITIONAL SECURITY.

NOTE: SURFACE MOUNTING HARDWARE NOT INCLUDED.

SCALE: NONE	<b>GERBER MFG., LTD.</b>	<b>GRILL ASSEMBLY</b>
DATE DRAWN: 5-24-06		
DRAWN BY: CHG	2917 LATHAM DRIVE - MAIDSON, WI 53713	316-SM GRILL
DATE REVISED:	<b>1-800-393-9923</b>	SURFACE MOUNT
REVISED BY:		

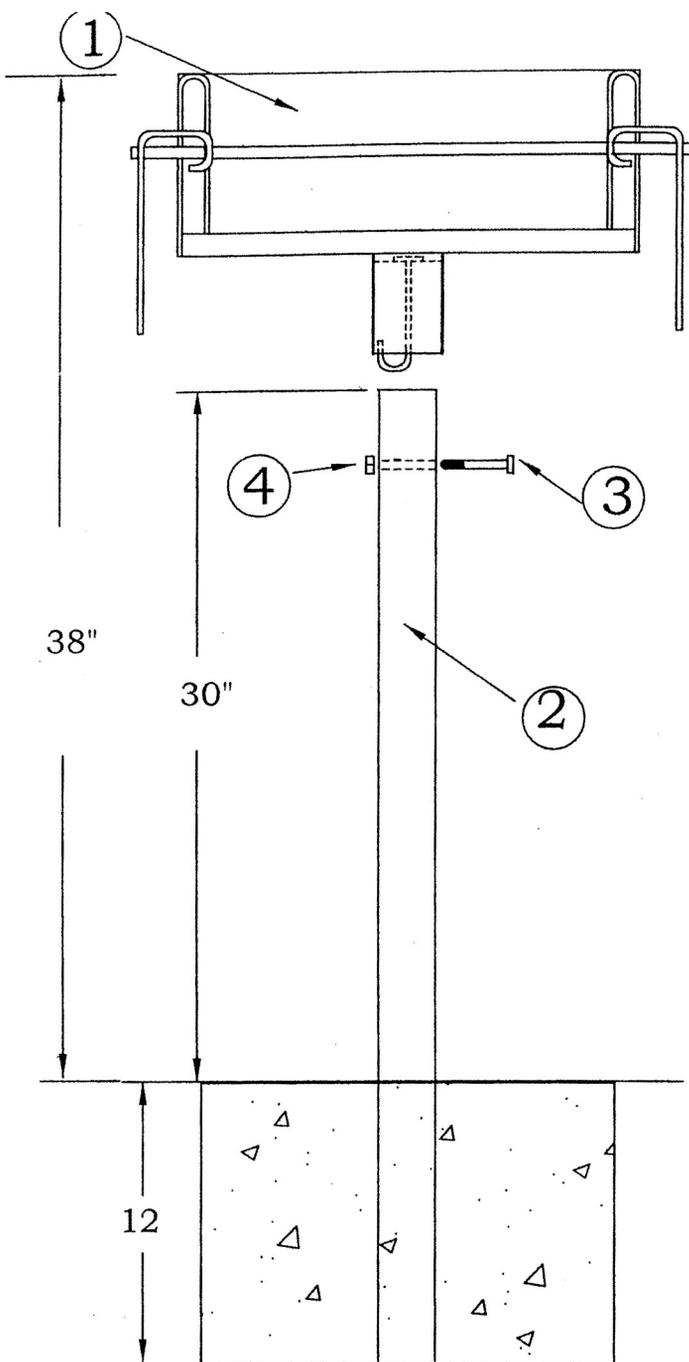

NOTE: ADJUST FOOTING SIZE FOR LOCAL SOIL CONDITIONS

1. DIG FOOTING HOLE 12" DEEP X 24" x 24" SEE FOOTING NOTE.
2. CONCRETE IN SUPPORT POST, PLUMB WITH TOP OF POST 30" ABOVE FINISH GRADE.
3. AFTER CONCRETE HAS CURED, SLIDE GRILL OVER THE SUPPORT POST AND BOLT TO SECURE.
4. HAMMER THE THREAD END OF BOLT FOR ADDITIONAL SECURITY.

SCALE:	NONE
DATE DRAWN:	5-24-06
DRAWN BY:	CHG
DATE REVISED:	
REVISED BY:	

**GERBER MFG., LTD.**   
 2917 LATHAM DRIVE - MAIDSON, WI 53713  
**1-800-393-9923**

**GRILL ASSEMBLY**  
 316-S GRILL  
 INGROUND MOUNT